 



Rund-Sonderform Kunststoff Stülpglas

XS 178.198 II

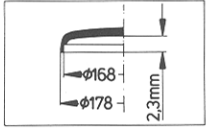


ROAMER X 7184

 XS 191.186 II

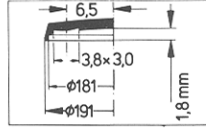


SEIKO 190 W01 AL

 XS 195.414 II

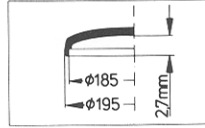


ROAMER X 7149

 XS 195.415 II

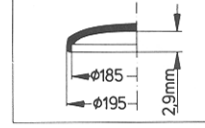


ROAMER X 7161

 XS 196.444 II

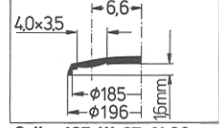


Seiko 195 W 07 AL00

 XS196.136 II

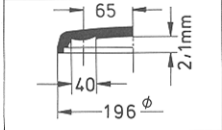


Seiko 195 W 01 AL0

 XS 200.452 II

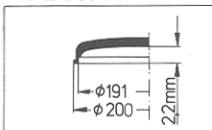


for Rolex Tropic 3

 XS 201.406 II

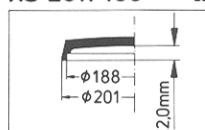


SEIKO 200 W0 1AN

 XS 204.419 II

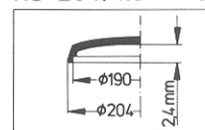


ORIENT OS-711, OS-718
FY 001 GA

 XS 205.447 II

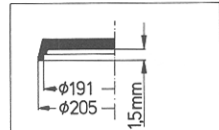


Citizen 54-01800

 XS 210.421 II

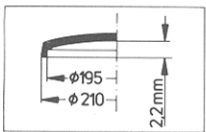


ORIENT OS-729 FY002GA

 XS 211.460 II

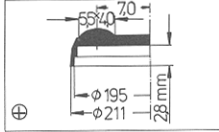


for Rolex Cyclop 121

 XS 215.428 II

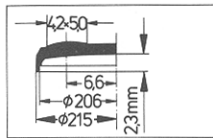


for Rolex CYCLOP 101

 XS 215.429 II

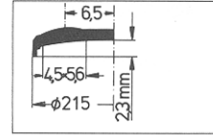


for ROLEX CYCLOP 129

 XS 216.466 II

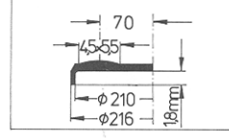


XS 217.458 II

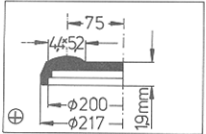 


for Rolex Imitation

 XS 218.411 II

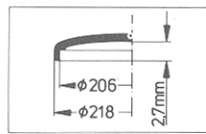


ROAMER X 7100

 XS 248.468 II

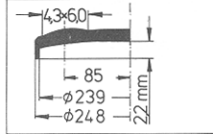


for Rolex Cyclop 103

 XS 253.455 II

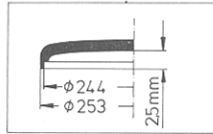


for Rolex Tropic 7

 XS 254.129 II

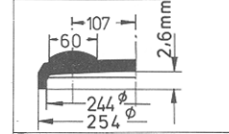


for Rolex Cyclop 104/105

 XS 255.456 II

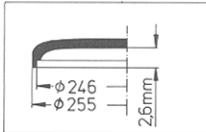


for Rolex Tropic 30

 XS 260.100 II

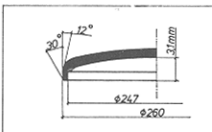


Roamer X 7103

 XS 260.116 II

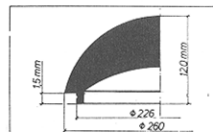


Citizen 54-01870

 XS 265.446 II

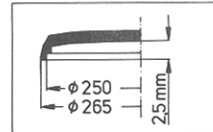


Citizen 54-01870

 XS 268.410 II

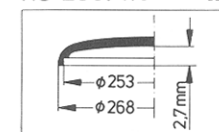


SEIKO 266 W0 1AN

 XS 275.467 II

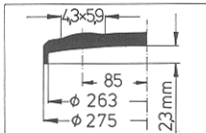


for Rolex Cyclop 106

 XS 280.101 II

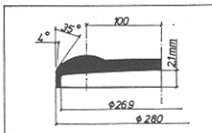


for Rolex Cyclop 107

 XS 292.155 II

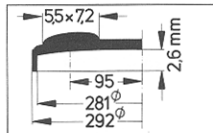


for Rolex Cyclop 108

 XS 293.156 II

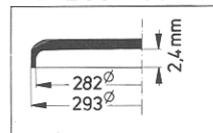


for Rolex Tropic 12

 XS 293.102 II

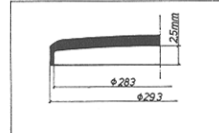


for Rolex Tropic 14

 XS 293.134 II

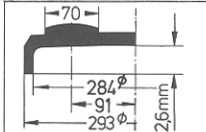


for Rolex Cyclop 111

 XS 293.103 II

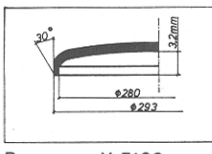


Roamer X 7132
X 7106

 XS 294.431 II

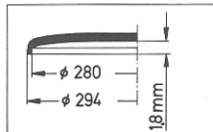


Mikado 4G 4005

 XS 294.463 II

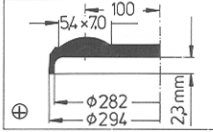

for Rolex Cyclop 123

 
XS 294.110 II

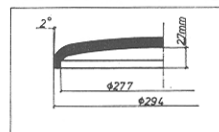


Citizen 51-102

Round Special Forms Plastic Topglass

 XS 294.440 II

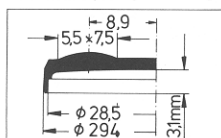


XS 295.445 II

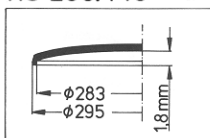 


Seiko 293W01AN00

 XS 295.453 II

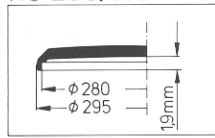


Citizen 01980

 XS 295.464 II

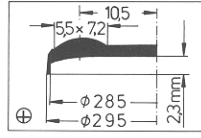


for Rolex Cyclop 112

 XS 295.469 II

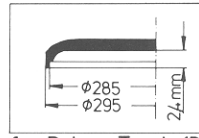


for Rolex Tropic 13

 XS 295.157 II

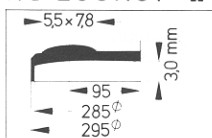


for Rolex Cyclop 117

 XS 297.174 II

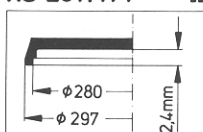


ORIENT OS-346 m. Drucker
M 008 6A

 XS 297.459 II

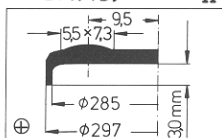


for Rolex Cyclop 145

 XS 297.175 II

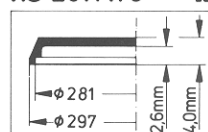


ORIENT OS-342 m. Drucker

 XS 300.158 II

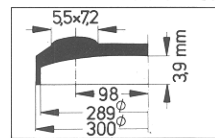


for Rolex Cyclop 116

 XS 301.165 II

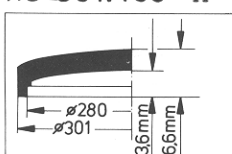


XS 302.196 II

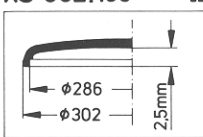 


ORIENT 16-983

 XS 302.450 II

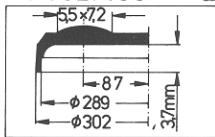


for Rolex Cyclop 116

 XS 303.430 II

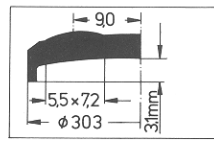


for ROLEX CYCLOP 127

 XS 303.462 II

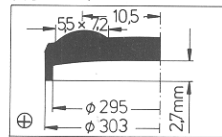


for Rolex Cyclop 125

 306
XS 304.154 II

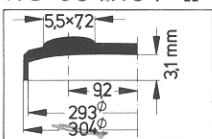


for Rolex Cyclop 114

 306
XS 304.465 II

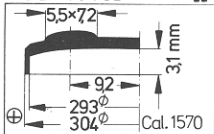


for Rolex Cyclop 114

 XS 305.451 II

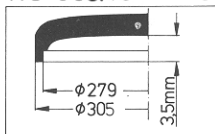


for Rolex Tropic 19

 XS 305.199 II

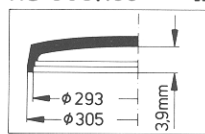


ROAMER X 7183

 XS 306.449 II

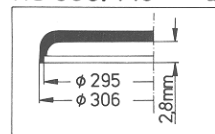


for Rolex Tropic 21

 XS 306.133 II

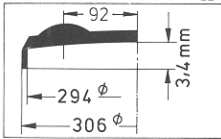


for Rolex Cyclop 118

 XS 306.401 II

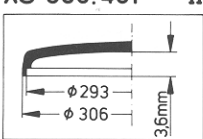


ROAMER X 7186

 XS 306.402 II

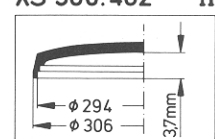


ROAMER X 7167

 XS 307.457 II

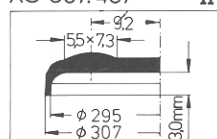


for Rolex Cyclop 135

 XS 308.194 II

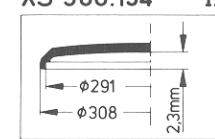


ORIENT 16-265 16-1059

 XS 308.107 II

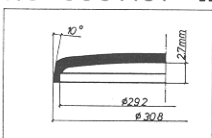


Citizen 31-201

 XS 308.176 II

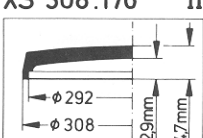


ORIENT OS-215, M001 6A

 XS 309.164 II

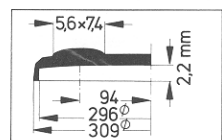


Ricoh 038.104

 XS 310.454 II

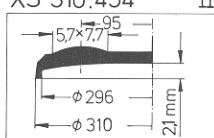


Ricoh PW 206

 XS 310.427 II

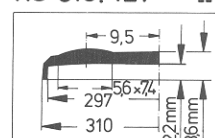


Ricoh 038104

 XS 310.442 II

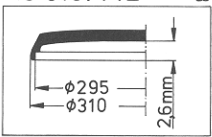


Citizen 54-01530

 XS 310.426 II

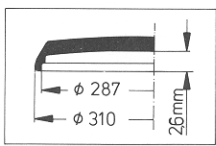


CITIZEN 54-0153

 XS 310.435 II

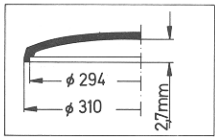


Seiko 308 W03 AN

 XS 310.412 II

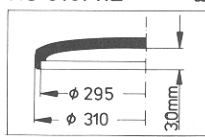

ROAMER X 7108

 
XS 310.109 II

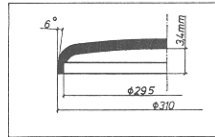

Citizen 51-201


Rund-Sonderform Kunststoff Stülpglas

 XS 310.413 II

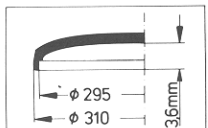


ROAMER X 7147

 XS 310.104 II

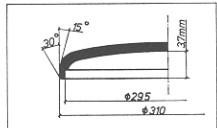


Roamer
X 7156, X 7125, X 7136

 XS 310.177 II

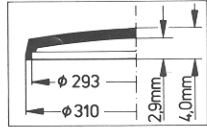


ORIENT OS-212 m.u.o. Dr.
MO01 GA

 XS 310.403 II

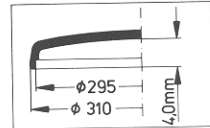


ROAMER X 7148

 XS 310.178 II

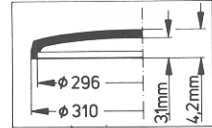


ORIENT OS-217, MO01 GA

 XS 311.111 II

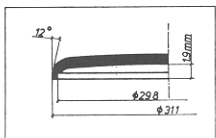


Citizen

 XS 311.191 II

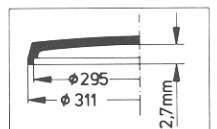


ORIENT 16-420 16-239

 XS 311.423 II

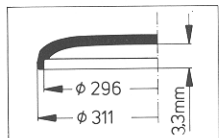


CITIZEN 54-00200

 XS 311.448 II

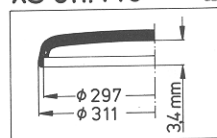


Citizen 54-00200

 XS 312.436 II

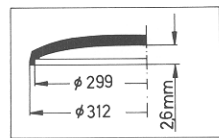


Seiko 310 W01 AN

 XS 312.106 II

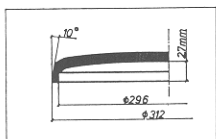


Citizen 51-201

 XS 312.108 II

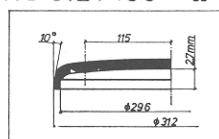


Citizen 51-203

 XS 312.408 II

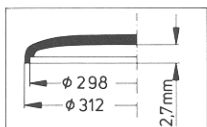


SEIKO 310 W0 4AN

 XS 314.417 II

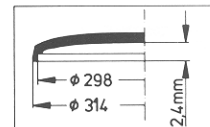


ORIENT OS-305, OS-308, OS-309
m.Dr., OS-319m.u.o.Dr., MO02GA

 XS 314.180 II

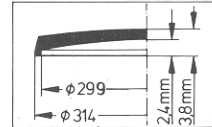


ORIENT OS-310 m. Drucker
MO02 GA

 XS 314.181 II

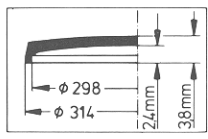


ORIENT OS-238, OS-326
MO02 GA

 XS 314.179 II

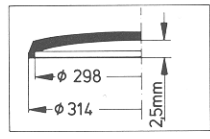


ORIENT OS-326m.Drucker
MO02 GA

 XS 316.432 II

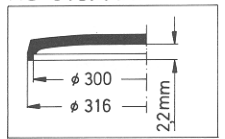


Mikado 4G 4011

 XS 316.131 II

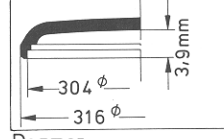


Roamer

 XS 316.404 II

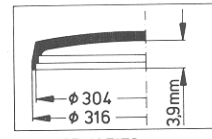


ROAMER X 7170

 XS 316.130 II

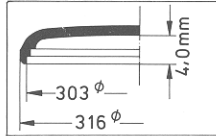


Roamer

 XS 317.407 II

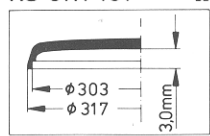


SEIKO 315 W0 2AN

 XS 319.183 II

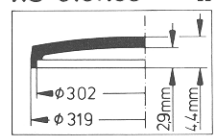


ORIENT OS-215, OS-252, OS-322
m. Drucker, MO04 GA

 XS 319.416 II

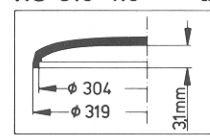


ORIENT OS-337 mit Drucker
MO04 GA

 XS 319.182 II

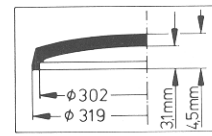


ORIENT OS-329, OS-318
m. Drucker, MO04 GA

 XS 319.184 II

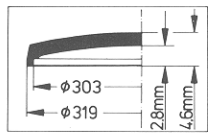


ORIENT OS-217, OS-227, OS-541
m. Drucker, MO04 GA

 XS 320.189 II

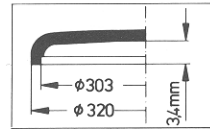


SEIKO 320 W0 3AN

 XS 321.424 II

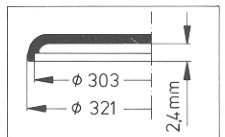


CITIZEN 54-0046

 XS 321.159 II

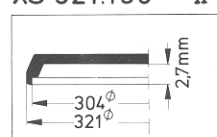


SEIKO 321 W0 5AN

 XS 322.409 II

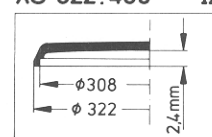


SEIKO 320 W0 3AN

 XS 322.422 II

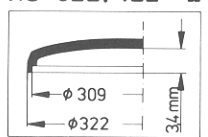


SEIKO 320 W0 SAN

 XS 322.114 II

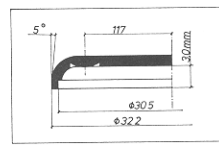


Seiko 45120 555

 XS 326.192 II

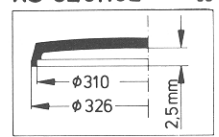


ORIENT 16-419 16-985

 XS 327.161 II

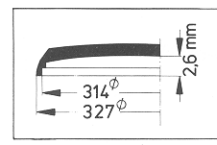


Seiko 325 W 05 AN

 XS 327.160 II

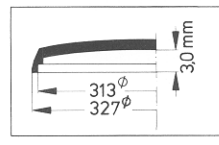


Seiko 325 W 06 AN

 
Round Special Forms Plastic Topglass

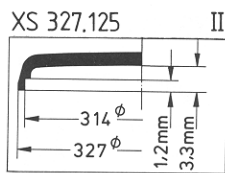


Seiko 325 W 04 AN

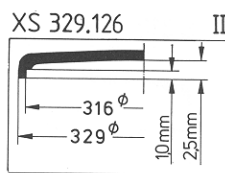 


Seiko 327 W 08 AN

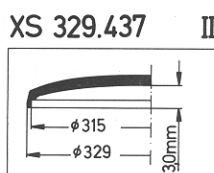 


Seiko 327 W01 AN 00

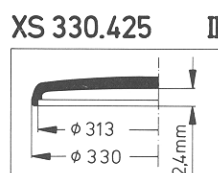 


CITIZEN 54-0054

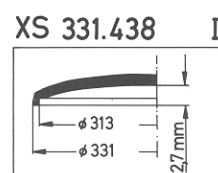 


Seiko 329 W01 AN00

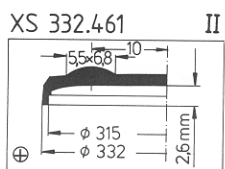 


for Rolex Cyclop 124

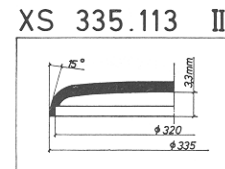 


Orient 16-418

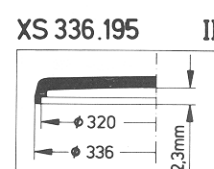 


ORIENT 16-966

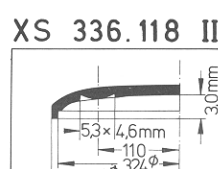 


Orient 16-959

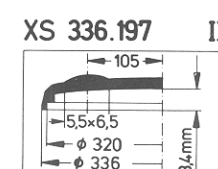 


Orient 16-959

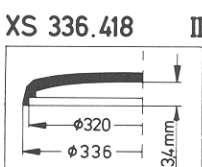 


Orient 16-991

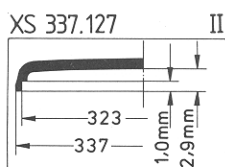 


Seiko 335 W 01 AN

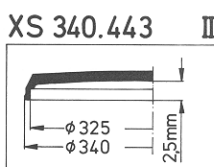 


Citizen 54-01260

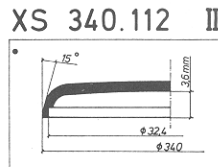 


Orient 16-924

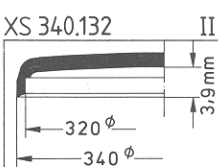 


Roamer

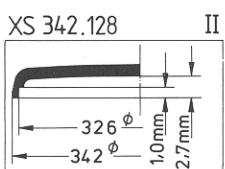 


Seiko 340 W 02 AN

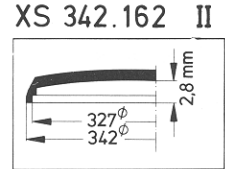 


Seiko 340 W06 AN00

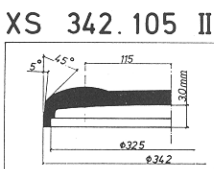 


Citizen 55-513

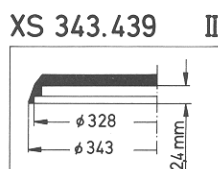 


Seiko 341 W02 AN

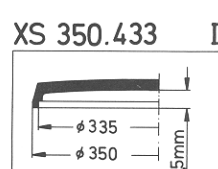 


Mikado 4G 4014

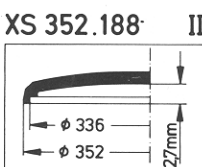 


RICOH

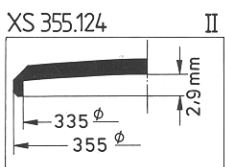 


Seiko

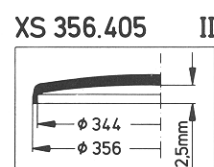 


ROAMER X 7318

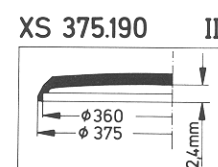 


Orient 16-244

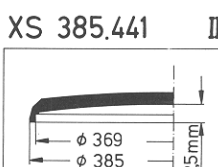 


Orient 16-588

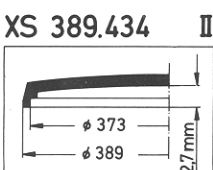 


Mikado 4G 4016

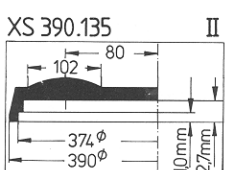 


Orient 16-017

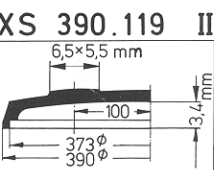 


Orient 16-916

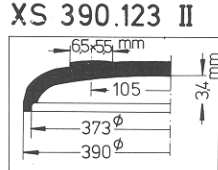 


Orient 16-870

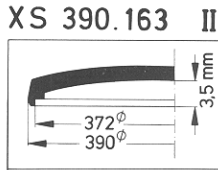 


Orient 16-974

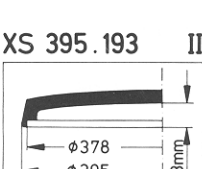 


Orient 16-478

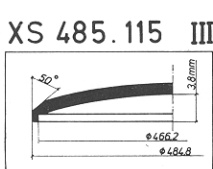 


Hanhart Kal. 1022

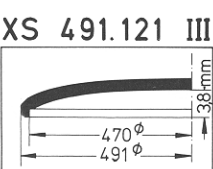 

Hanhart Kal. 1012

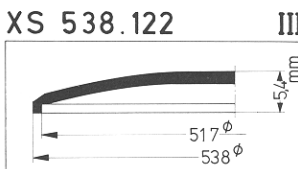 

Hanhart

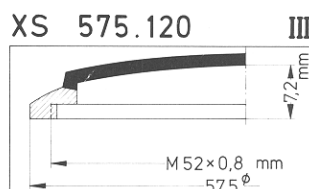 

Hanhart Kal. 1021