


# Cal. 4336A

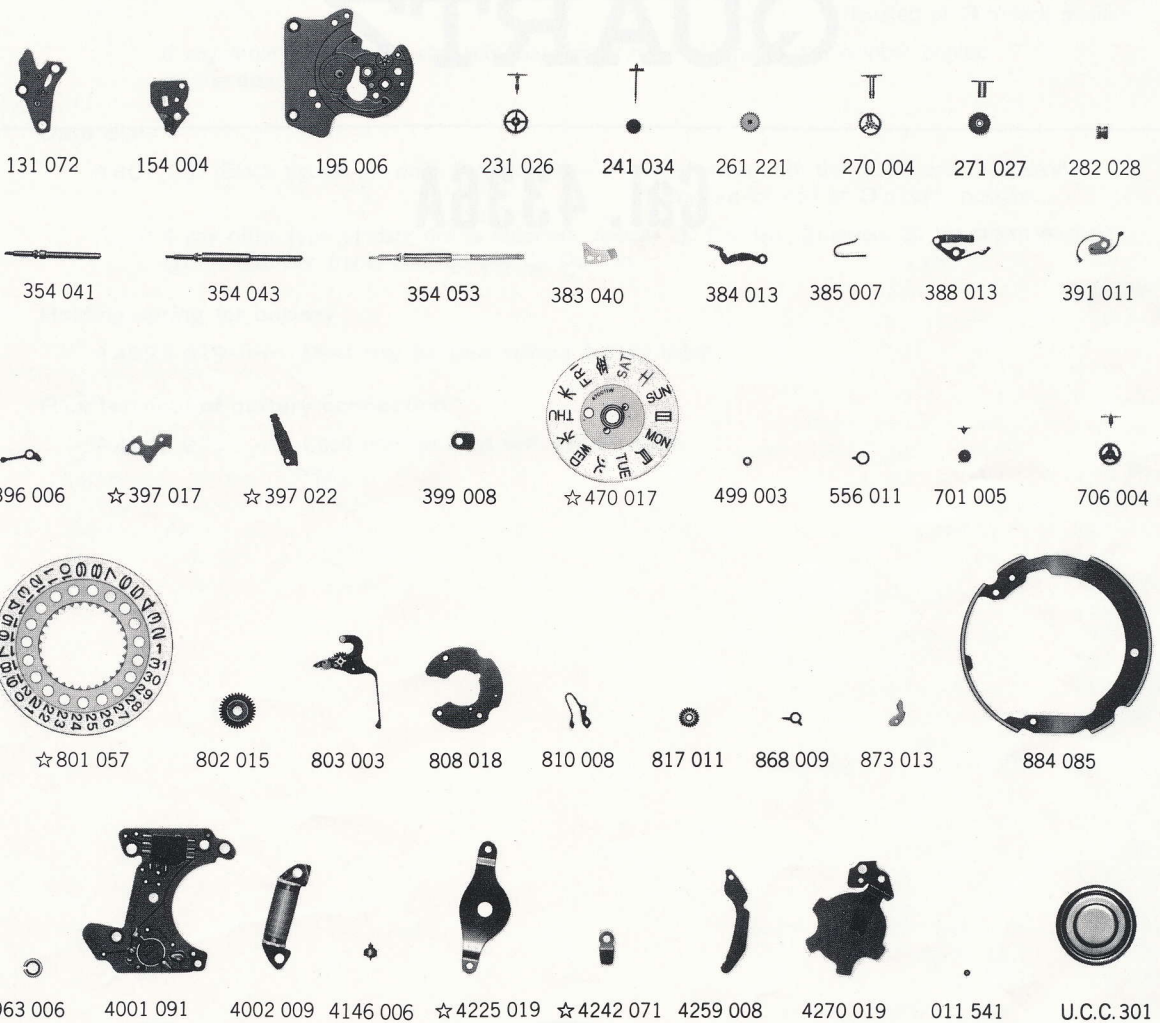

012 354	012 417	012 443	012 444	012 715	012 726	012 752	012 774	012 776	017 074
017 075	017 076	017 079	017 119	017 120	017 503	017 714	017 924		2/1

☆◇Please see remarks on the next reverse page.

# Cal. 4336A

## Characteristics

Casing diameter :  $\phi$  25.60 mm  
 Maximum height : 4.24 mm  
 Jewels : 2J  
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz . . . . Cycles per second)  
 Driving system : Step motor system (2 poles)  
 Regulation system : Trimmer condenser  
 Second-setting device  
 Calendar (day & date)  
 Instant setting device for day & date calendar  
 Bilingual change-over system for day of the week  
 Battery life indicator : Second hand moves in two-second interval.

PART NO.	PART NAME	PART NO.	PART NAME
131 072	Third wheel bridge	012 417	Third wheel bridge screw
154 004	Fifth wheel bridge	012 443	Circuit block screw (screw for holding spring for battery, screw for plus terminal of battery connection)
195 006	Calendar plate	012 444	Calendar plate screw
231 026	Third wheel & pinion	012 715	Back plate (anti-magnetic) screw
241 034	Fourth wheel & pinion	012 726	Casing clamp screw
261 221	Minute wheel	012 752	Fifth wheel bridge screw
270 004	Center minute wheel	012 774	Date driving wheel screw
271 027	Hour wheel	012 774	Date dial guard screw
282 028	Clutch wheel	012 776	Screw for dial holding ring
354 041	Winding stem (12.89 mm)	017 074	Stopper tube for circuit block
354 043	Winding stem (17.89 mm)	017 075	Tube for third wheel bridge screw A
354 053	Winding stem (20.89 mm)	017 076	Tube for circuit block screw A
383 040	Setting lever	017 079	Tube for circuit block screw B
384 013	Yoke (Clutch lever)	017 119	Tube for third wheel bridge screw B
385 007	Yoke spring (Clutch lever spring)	017 120	Tube for battery connection
388 013	Setting lever spring	017 503	Spacer for circuit block
391 011	Second setting lever	017 714	Lower bush for fifth wheel
396 006	Friction spring for fourth wheel & pinion	017 924	Eccentric dial pin
☆397 017	Lever for unlocking stem	U.C.C.301	Silver oxide battery
☆397 022			
399 008	Casing clamp		
☆470 017	Day star with dial disk		
499 003	Day finger ring		
556 011	Date finger		
701 005	Fifth wheel		
706 004	Sixth wheel & pinion		
☆801 057	Date dial		
802 015	Date driving wheel		
803 003	Setting wheel lever complete		
808 018	Date dial guard		
810 008	Date jumper		
817 011	Intermediate date wheel		
868 009	Day finger		
873 013	Day jumper		
884 085	Holding ring for dial		
963 006	Snap for day star with dial disk		
4001 091	Circuit block		
4002 009	Coil block		
4146 006	Step rotor		
☆4225 019	Holding spring for battery		
☆4242 071	Plus terminal of battery connection		
4259 008	Back plate (anti-magnetic)		
4270 019	Battery connection		
011 541	Upper hole jewel for step rotor		
011 541	Lower hole jewel for step rotor		
012 354	Setting lever spring screw		

☆⇒ Please see remarks on the reverse page.

# Cal. 4336A

## Remarks :

### Lever for unlocking stem

☆397 017.....Used when the winding stem is removed by pushing the lever for unlocking stem from the case back side.

☆397 022.....Used when the winding stem is removed by pushing the lever for unlocking stem from the dial side.

### Day star with dial disk

☆470 017(English ↔ Spanish, black figures on white background).....Used when both the crown and the calendar frame are located at **3** o'clock position.

If any other type of day star with dial disk is required, specify the number printed on the disk.

### Date dial

☆801 057(Black figures on white background).....Used when both the crown and the calendar frame are located at **3** o'clock position.

If any other type of date dial is required, specify ① Cal. No. ② jewels ③ the crown position ④ the calendar frame position and ⑤ Dial No.

### Holding spring for battery

☆4225 019.....Used only for case without battery hatch.

### Plus terminal of battery connection

☆4242 071.....Used only for case with battery hatch.