



		026ST816	STEEL END-LINK 1515
		124ST3294 (x2)	SCREW
		035ST1515816	STEEL UNDERPIECE
		035ST159086701	STEEL EXTENSION
		068ST2207 (x50)	SPRING-BAR
		068ST9993 (x2)	SPRING-BAR
		068ST9997 (x2)	SPRING-BAR
		085ST0113 (x2)	SPRING
		086ST0069 (x2)	STEEL PUSH-PIECE
		086ST0072 (x2)	STEEL PUSH-PIECE
		096ST0050	CALOTTE 1589 858
		107ST3352 (x2)	SCREW S1.2 L2.2 STEEL
		114ST1515 (x3)	STEEL LINK
		124ST3307 (x2)	SCREW M1.40 ØH1.9 L1.8 STEEL
		128ST0243	STEEL PIN
		115ST1515	1/2 STEEL LINK
		124ST3307 (x2)	SCREW M1.40 ØH1.9 L1.8 STEEL
		126ST1515	1/2 STEEL LINK WITHOUT NUR
		128ST0243	STEEL PIN
		116ST1590	STEEL COVER
		117ST1515816	STEEL CLASP
		035ST1515816	STEEL UNDERPIECE
		035ST159086701	STEEL EXTENSION
		068ST9993 (x2)	SPRING-BAR
		068ST9997 (x2)	SPRING-BAR
		085ST0113 (x2)	SPRING
		086ST0069 (x2)	STEEL PUSH-PIECE
		086ST0072 (x2)	STEEL PUSH-PIECE
		096ST0050	CALOTTE 1589 858
		107ST3352 (x2)	SCREW S1.2 L2.2 STEEL
		116ST1590	STEEL COVER
		201ST1016	BRACELET PIPE
		118ST1515	STEEL LINK FOR CLASP
		124ST3307 (x4)	SCREW M1.40 ØH1.9 L1.8 STEEL
		128ST0243 (x2)	STEEL PIN
		119ST1515	BRA.STRAND STEEL
		124ST3307 (x2)	SCREW M1.40 ØH1.9 L1.8 STEEL
		128ST0243	STEEL PIN
		124ST3294 (x2)	SCREW
		124ST3307 (x2)	SCREW M1.40 ØH1.9 L1.8 STEEL
		128ST0243	STEEL PIN
		201ST1016	BRACELET PIPE