



We recommend to follow this procedure whenever you wind the clock.
 If „ohne Ankerautomatik“ without auto beat:
 Start the pendulum until you hear the tick-tack sound. If the setting
 is correct the tick-tack sound will be steady. If not move the pendulum
leader to the point you feel the resistance push the leader carefully
beyond this point check the tick-tack sound again. If better do it again
 until the tick-tack sound is steady. If worse than before you moved
 the leader in the wrong direction move it in the other direction until
 the tick-tack sound is steady.