

**\*\*\*\*\* CALL. 0R15/21 MOV'T PARTS LIST \*\*\*\*\****ORIGINAL PARTS, MADE IN JAPAN*

<u>PART NAME</u>	<u>0R15</u>	<u>0R21</u>
BATTERY	280-7600	280-7600
BATTERY CLAMP	234-791	234-751
BATTERY CONNECTOR SPRING	231-344	231-344
BATTERY INSULATING PLATE	233-429	233-429
CANNON PINION WITH DRIVING WHEEL	028-322	028-226
CENTER WHEEL COCK	711-169	711-169
CLUTCH WHEEL	064-930	064-852
COIL UNIT	246-171	246-171
DATE DIAL	108-A2XX	----
DATE DIAL DRIVING WHEEL	103-106	----
DATE DIAL GUARD	293-101	----
DATE JUMPER	109-590	----
DIAL GUARD	713-131	----
DIAL RING	502-000	----
DIAL WASHER	078-040	078-040
ELECTRONIC CIRCUIT UNIT	279-842	279-842
FIFTH WHEEL AND PINION	084-610	084-610
FOURTH WHEEL AND PINION	023-274	023-274
HOUR WHEEL	075-511	075-374
INTERMEDIATE DATE WHEEL	100-410	----
INTERMEDIATE MINUTE WHEEL	087-128	087-128
MINUTE WHEEL AND PINION	072-112	072-112
POWER CELL CONNECTOR	235-395	235-395
ROTOR	285-139	285-139
SCREW FOR BATTERY CLAMP	929-590	929-590
SCREW FOR COIL UNIT	929-590	929-590
SCREW FOR DATE DIAL MAINTAINING PLATE(×3)	929-460	----
SCREW FOR ELECTRONIC CIRCUIT UNIT(×2)	929-590	929-590
SCREW FOR SETTING LEVER SPRING	929-590	929-590
SCREW FOR TRAIN WHEEL BRIDGE(×2)	922-880	922-880
SCREW FOR UPPER PLATE(×2)	929-590	929-590
SETTING LEVER	067-187	067-186
SETTING LEVER SPRING	077-114	077-114
SETTING STEM	065-436	065-436
SETTING WHEEL	076-600	076-600
SPACER FOR POWER CELL CONNECTOR	027-108	027-108
SPACER FOR SETTING STEM	212-194	212-186
STATOR	190-124	190-124
THIRD WHEEL AND PINION	017-141	017-141
TRAIN WHEEL BRIDGE	701-894	701-894
UPPER PLATE	703-102	703-077
YOKE	071-127	071-127