

Chime release on mechanical movements has to be adjusted, which means you have to turn the bushing in the minute hand. until the movement would chime at the correct position.

