



4.5 Special accessories

Can be ordered separately:

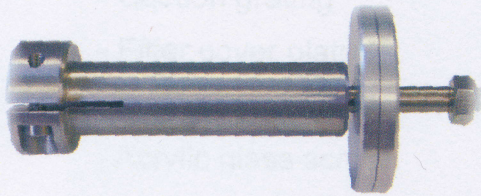

Grinding disc holder V2A, right

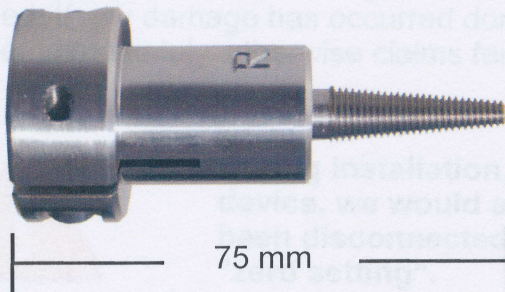

Polishing spindle V2A, right short version

Before unpacking, make sure the packaging has not suffered any external damage. Open the protective paper and the foam packaging. Firstly, remove the accessories. They are packed separately from the main carton. These are:

Next, lift the device out carefully and remove any foam packaging from the bottom. Please retain all the original packaging including the protective packaging, in case the unit has to be returned. Check the device for any damage and make sure all the accessories have been included. If damage has occurred during transportation, please contact the supplier. No claims for damages can be accepted.

Installation, preparation and/or modification of the device, we would ask you to ensure that the mains plug has been disconnected and the green rocker switch is in the 'off' position.

Remove the protective film from the control panel. Place the filter cover plate into the chamber above the filter. Next, position the suction grating in the opening provided in the cover plate.

Take the screen, remove the protective film and maneuver the cover horizontally backwards into the guides provided for it in the hood.

Connect the mains power cable that is included at the rear of the device and plug it into the mains socket.



Protect the mains cable from heat and sharp objects and install it in such a way that it cannot be damaged. If the cable has to be extended, make sure it is in perfect condition and, before use, ensure correct current carrying capacity.

The device is now ready to use!

Before unpacking, make sure the packaging has not suffered any external damage. Open the carton; remove the protective paper and the foam packaging. Firstly, remove the carton with the accessories that are packed separately from the main carton. These are :

- Suction grating
- Filter cover plate
- Mains power cable
- Acrylic glass screen

Next, lift the device out carefully and remove any foam packaging from the bottom. Please retain all the original packaging including the protective packaging, in case the unit has to be returned.

Check the device for any damage and make sure all the accessories have been included. If any damage has occurred during transportation, please contact the supplier immediately, otherwise claims for damages cannot be accepted.



**During installation, preparation and/or modification of the device, we would ask you to ensure that the mains plug has been disconnected and the green rocker switch is in the "zero setting".**

Remove the protective film from the control panel. Place the filter cover plate into the chamber above the filter. Next, position the suction grating in the opening provided in the cover plate.

Take the screen, remove the protective film and manoeuvre the cover horizontally backwards into the guides provided for it in the hood.


Connect the mains power cable that is included at the rear of the device and plug it into the mains socket.



**Protect the mains cable from heat and sharp objects and install it in such a way that it cannot be damaged. If the cable has to be extended, make sure it is in perfect condition and, before use, ensure correct current carrying capacity.**

The device is now ready to use !

Before putting into service, please test the individual keys on the control panel and familiarise yourself with the device.

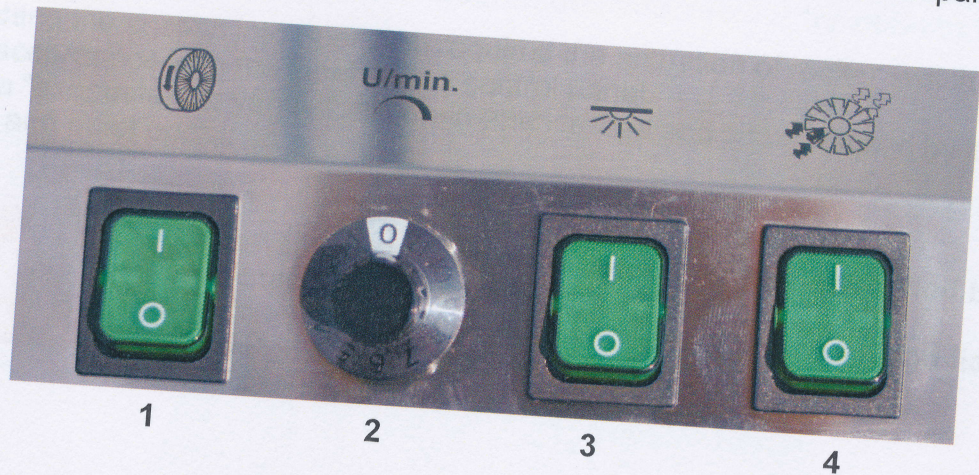


- Switch 1 On/Off rocker switch for polishing motor
- Switch 2 Poti for adjusting the rotational speed
- Switch 3 On/Off rocker switch for lighting
- Switch 4 On/Off rocker switch for suction

### 6.1 Lighting

The lighting consists of 4 x 9 high-power LEDs with an illuminating power of 640 lumens, which illuminate the working space of the polisher optimally and are glare-free.

Non-fatiguing work is guaranteed thanks to the pleasant white light.

Actuate rocker switch 1 (  ) to switch the light on. The lighting unit on the device is dust- and dirt-proof and can be cleaned easily and safely.



**To clean, use a slightly damp, dust-free cloth. In order to avoid any defects or damage to the protective glass, NEVER use aggressive solvents for cleaning purposes.**

Should damage occur to the lighting cover or should it become badly scratched, you can replace the cover yourself, as is usual with our products. The protective acrylic glass cover can be purchased as a spare part.