

Unispeed

Exchange of selector-switch

CAUTION!


Danger of electric shock!



- Repair must be carried out by electrically educated persons only!
- Separate the unit from the mains before opening!

Preparation: open the unit by removing the bottom plate

1. Remove the knob from the selector-switch axis (A).
2. Release the snap-in connection (B) of the 2 green rocker switches and pull the switches to the front.
3. Carefully loosen the frontplate (C) by e.g. a knife.
4. Open the 2 holding-screws of the selector switch.
5. Now the selector-switch could get removed from the casing.

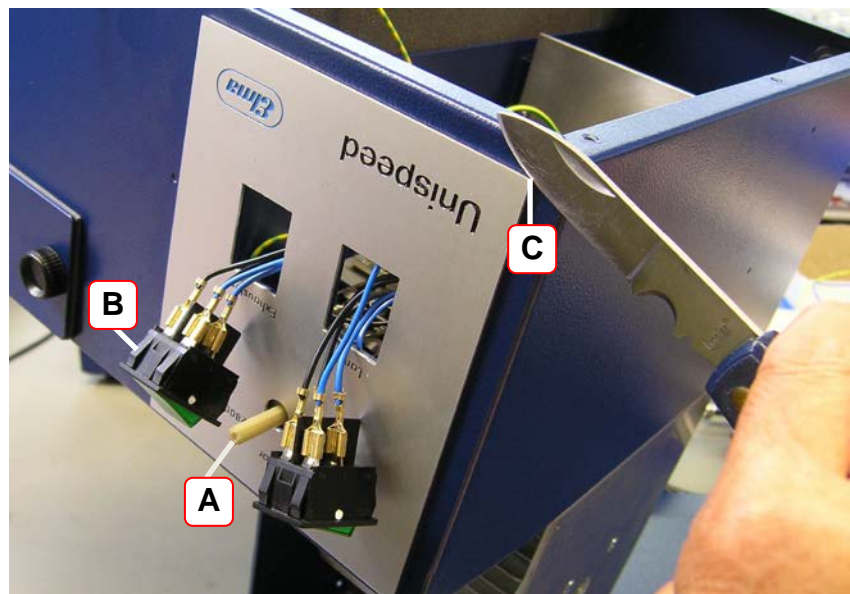

6. Take over the wiring-connectins from the old to the new selector-switch.
7. Fix the new selector-switch back to the unit.
8. Press the self adhesive front panel back to the unit-casing.
9. Snap-in the rocker switches back into the unit- casing (take care about the direction)
10. Fix the operating knob onto the selector switch axis (A).

