
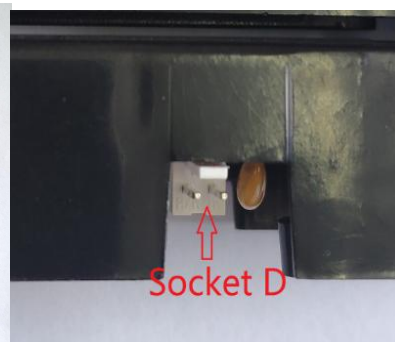
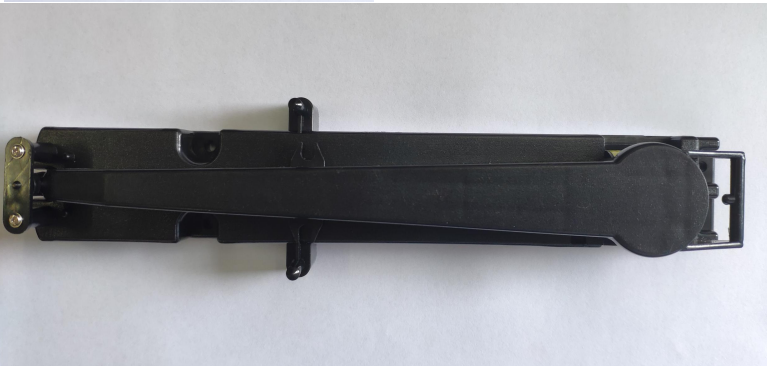


INSTRUCTION

Control box(Battery box) and Pendulum hanger:


Battery boxes use two D batteries

There are four sockets as below:

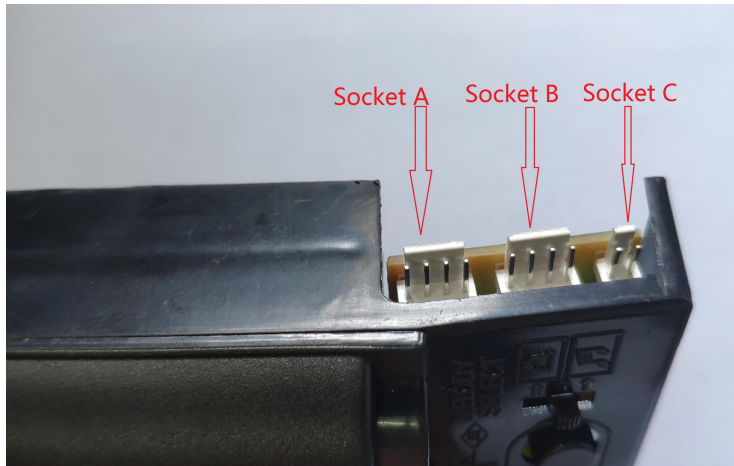

Time setting: "TIME ADJ" button, every time you press it, the sound of Ping-pang will increase once.

Musice Switch: The musice can be switched to Westminster or Ping-pang.

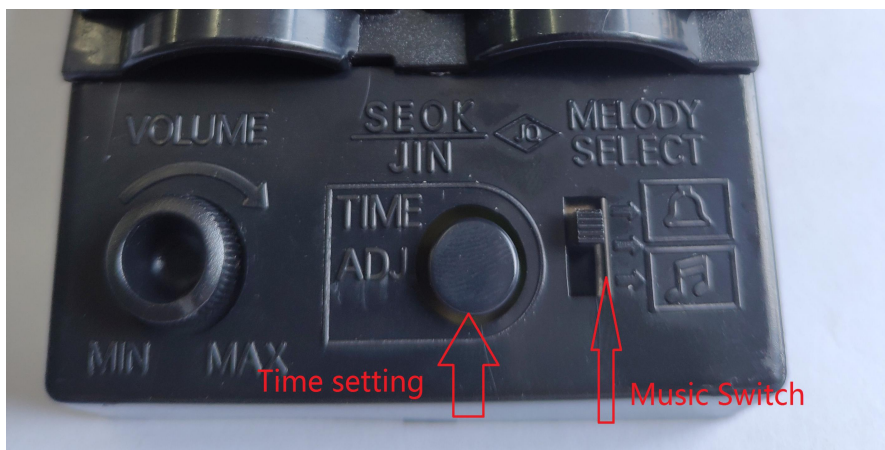

Wire connection 1:

There are one plug(Connecting socket C) and one two-electrode valve. The function of this wire is to receive optical signal.

**Wire connection 2:**

There are two plugs include four-hole plug(connecting socket B) and two-hole plug (connecting socket D).

**Wire connection 3:**

There is one four-hole plug(connecting socket A)

