

Troubleshooting

There is a general misconception that the winder will increase the power reserve your watch but that is incorrect. The winder is designed to rotate and maintain the amount of power reserve for the watch and if there is a low power reserve then the watch may stop when placed in the winder.

There are some factors which generally affect the effectiveness of the winder:

1) Check the watch placement in the winder. Your watch should be placed in the winder with the dial facing up. When looking at your watch in the winder, it should be as if you are making a reading of it from your wrist.

2) Some watches must be fully wound before being placed into our winder as the power reserve when removed from your wrist may not be enough to keep the watch wound. Please refer to your instruction manual on how to manually wind your watch.

3) Manually winder your watch prior to placing it into the winder.

In some rare instances, due to the watch design, a steeper winding angle is required. You can prop the back of the winder using a book or magazine to increase the angle of the tumbale and test the winder again. The closer the watch dial is to being vertical the better the chance of the test being accurate.

Automatic Watch Winder Manual


— Time's moving just because of me —

CAUTION:

1. Please use the adaptor included with your watch winder or similar adaptor with exact same voltage output.
2. Please do not manually spin the winder. This will damage you watch winder and void your warranty
3. Avoid exposing the watch winder to direct sun, water or other moisture, and extreme temperatures which may damage the watch winder

The relentless pursuit of perfection


Automatic Watch Winder

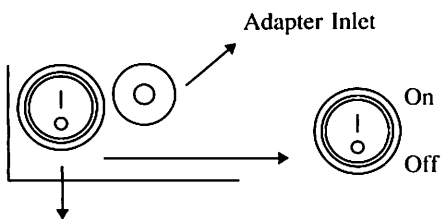

Power Switch>(*Note:4+&8+models have two seitches

(Bottom of Watch Winder)

Battery Compartment

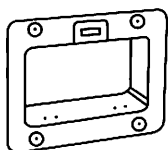

Battery remove the battery cover on the bottom of the unit,and attach 2pcs 1.5V battery to the snaps. Replace the cover.

FAQ

- Q: I can't find my power adapter!**
A:Adapter is embedded in the foam packaging in a white box.
- Q: My watch winder does not turn on.**
A:Check that the ac adapter is plugged into the inlet of your winder tightly and that the outlet you use is working. Some adapters come equipped with an LED light indicating that they are working.Lastly,check that your power switch on the back of your winder is switched in the on(1) position.
- Q: My watch winder has stopped working after several minutes.**
A:Winder operates intermittently,please review rotation information and observe the winder as it should start again.Otherwise,refer to the second question.
- Q: My watch winder does not wind my watch.**
A:Watches should be fully wound previous to being placed in the winder.Check that your watches are compatible with bi-directional automatic watch winders and refer to watch instruction manual on the winding information.
- Q: My watch does not fit around the pillow.**
A:Remove the pillow (S) from the slots on the winder. Close watch strap or bracelet and squeeze the pillow in (horizontal position).You should then be able to insert your watch with the pillow into the slots on the winder.If you have a smaller size strap or bracelet,you can remove the stuffing from the pillows to accommodate for the size.

PLEASE KEEP ALL THE ORIGINAL PACKAGE MATERIALS FOR ALL DAMAGE CLAIMS THAT IF YOU MISS OR LOST ANY PARTS OF THE ORIGINAL PACKAGE MATERIALS INCLUDING BOX,FORMS AND ANYTHING ELSE THAT CAME WITH THE ORIGINAL PACKAGE.

PLEASE CONTACT US IMMEDIATELY TO REPORT ANY DAMAGES.

PLEASE OPEN YOUR MERCHANDISE WITHIN (3) DAYS OF RECEIVING THE MERCHANDISE.

Warranty does not cover normal "wear and tear".

Our watch winders are covered by a limited 30 day warranty.Warranty will cover repair or replacement of watch winder within 30 days of delivery.We do not cover or express any other warranty other than described.

30 Day Limited Warranty

Warranty