




N°1	Description	Photo
1	Disassemble the stop ring and remove the pin.	
2	Slightly loosen the column using an imbus key.	
3	Engage the control shaft as far as the stop with the table.	

4

Tighten the column using an imbus key.



5

Refit the spindle and re-attach the stop ring.

