

Technical note 116: Erreur "Slave is not responding"
of the **MIG-O-MAT** microflame series



Requirements:

Single-user operation without additional connected microflame devices (slaves) and

Software version up to and including 6.4 (see backside of circuit board).



Error „Slave is not responding“



1. Switch the device to standby mode using the "ON/OFF" button



2. Press the two left buttons „ON/OFF“ and „M“ simultaneously



3. Press „M“ button

The master-slave mode is now deactivated again and the device is ready for use. The message "Filling OK?" appears.

From here you can continue working with the normal start routine.