

※Please contact us when you order these parts. ※订购零件时请与我们联系

PARTS NAME 零件名称		PARTS CODE 零件编号	
		Type - M	Type - L
Train wheel bridge	轮列夹板	0125 406	
Center wheel bridge	中心轮夹板	0121 060	
Center wheel and pinion	中心轮	0221 137	※
Third wheel and pinion	3# 轮	0231 061	
Fourth wheel and pinion	4# 轮 (1/4秒行针)	0144 006	※
Fifth wheel and pinion	5#轮	0701 017	
Sixth wheel and pinion	6#轮	0706 008	
Step rotor	磁石轮	4146 104	
Hour wheel	时轮	0273 046	※
Minute wheel and pinion	度数轮	0261 052	
Setting wheel	小铁车	0281 015	
Clutch wheel	离合轮	0282 452	
Setting lever	设置杆 (压制)	0383 154	
Yoke	离合杆 (横担)	0384 452	
Train wheel setting lever	规正弹弓	0391 029	
Stator	定子板	4239 065	
Friction spring for fourth wheel and pinion	秒轴压片	0560 005	
Circuit block	回路板	4004 474	
Coil block	线圈	4002 071	
Battery connection(+)	正极片(+)	4268 144	※
Battery connection(-)	负极片(-)	4270 339	
Insulator	绝缘片	4216 103	
Intermediate wheel for date corrector (A)	日历修正中间轮 (A)	0804 169	
Support for dial side parts	日历星期弹弓片	0604 015	
Battery connection(+) screw	正极片(+) 螺丝	0012 168	
Support for dial side parts screw	日历星期弹弓片螺丝	0012 354	
Center wheel bridge screw	中心轮夹板螺丝	0012 354	
Coil block screw	线圈组螺丝	0012 354	
Winding Stem (TYPE A)	巴芯	0351 177	
Winding Stem (TYPE B)	巴芯	0351 122	