




THERMOSTAT CONTROL

HOW TO CHANGE?

1. REMOVE THE FRONT DOOR

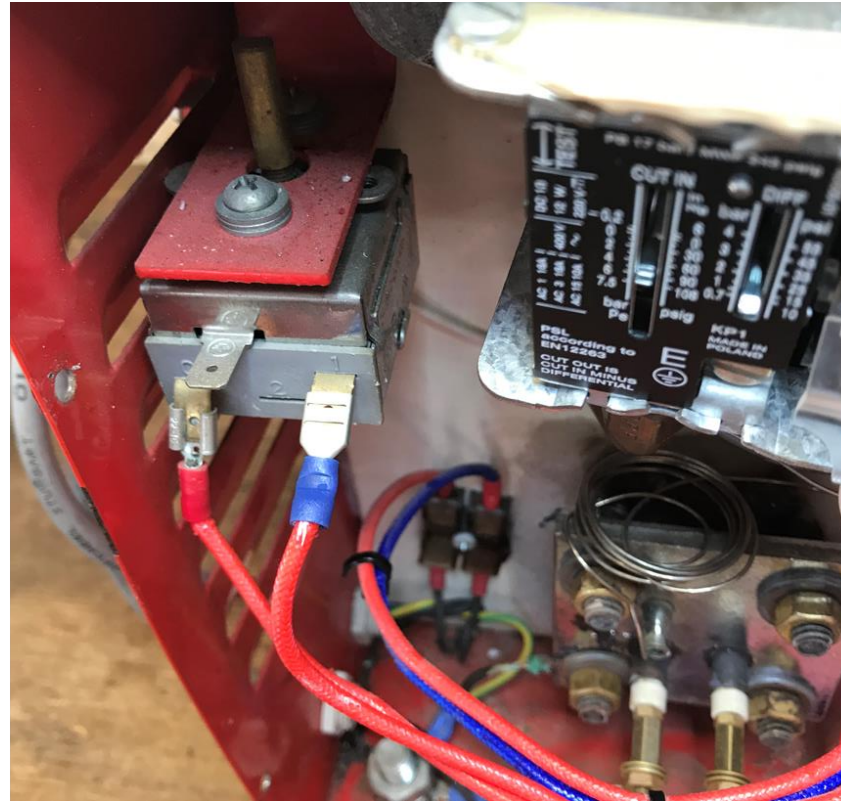


2. DISCONNECT THE 2 ELECTRICAL WIRE



3. PULLING OUT THE KAPILAR OF THE THERMOSTAT FROM THE HEATING ELEMENT



4. UNSCREW THE 2 BLACK SCREWS FROM
THE BRACKET OF THE THERMOSTAT

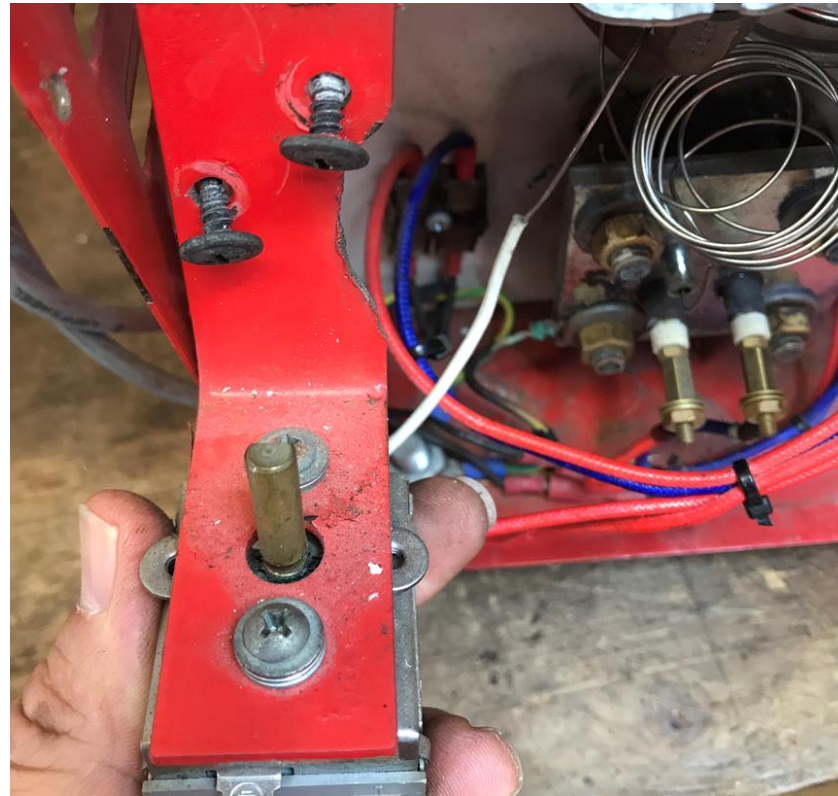

5. OPENING THE 2 SCREWS OF THE HOLDING THERMOSTAT TO THE BRACKET





6. REPLACE A NEW ONE AND
REPEAT WITH THE SAME ORDER