

PARTS NAME 零件名称		PARTS CODE 零件编号
		Type – M
Barrel and train wheel bridge with hole jewel frame	轮列夹板	0114 177
Lower plate for barrel and train wheel bridge	发条鼓下夹板	0436 166
Center wheel bridge	中心轮夹板	0122 302
Pallet bridge	擒縱叉(马仔)夹板	0161 310
Balance cock	摆夹板组件(不带油丝)	0171 349
Balance complete with stud	油丝连夹板含外桩	0310 065
Automatic train bridge	自动锤夹板	0191 064
Barrel complete with mainspring	条盒轮(发条鼓)	0201 178
Center wheel and pinion	中心轮	0221 178
Third wheel and pinion	3# 轮	0231 070
Fourth wheel and pinion	4# 轮(秒轮)	0144 178
Escape wheel and pinion	擒纵轮(莲花轮)	0251 314
Clutch wheel	离合轮	0282 183
Winding pinion	企轮	0283 020
Ratchet sliding wheel spring	游动座弹弓	0363 184
Ratchet wheel	大钢轮	0285 051
Pallet fork	擒縱叉(马仔)	0301 315
Click	止逆爪(上鍊弹弓)	0381 004
Setting lever	设置杆(押制)	0383 185
Yoke	离合杆(横担)	0384 183
Yoke spring	离合杆簧(横担压片)	0388 177
Balance stop lever	止秒杆	0601 310
First reduction wheel	自动轮	0511 010
Second reduction wheel and pinion	逆轮	0514 183
Pawl lever	自动叉	0831 183
Reduction wheel holder	自动轮固定片	0836 002
Date corrector setting transmission wheel A	日历修正传动轮 A	0962 183
Date corrector setting transmission wheel B	日历修正传动轮 B	0962 190
Date corrector setting transmission wheel C	日历修正传动轮 C	0962 023
Date corrector setting transmission wheel D	日历修正传动轮 D	0962 023
Seconds transmission wheel	秒传动轮	0505 181
Minute transmission wheel	分传动轮	0505 182
Time setting transmission wheel and pinion	时间设定传动轮	0817 180
Unit intermediate spacer	模块垫片	4408 181
Chronograph main plate	计时码表地板	0186 193
Chronograph bridge	计时码表夹板	0190 196
Second counter intermediate wheel	计秒中间轮	0885 192
Second counting wheel	计秒轮	0888 181
Minute counter intermediate wheel and pinion A	计分中间轮和轴A	0886 182
Minute counter intermediate wheel and pinion B	计分中间轮和轴B	0886 183
Minute counting wheel	计分轮	0902 184
Hour counting wheel	计时轮	0902 161
Second wheel	秒轮	0240 178
Center wheel	中心轮	0270 443
Hour wheel	时轮	0273 277
Second counting wheel spring	计秒轮弹弓	0353 178
Operating cam	星柱轮	0576 180
Operating cam jumper	星柱轮弹弓	1024 178

PARTS NAME 零件名称		PARTS CODE 零件编号
		Type – M
Operating lever A	操作杆A	0571 177
Operating lever B	操作杆B	0571 179
Operating lever spring	操作杆弹弓	0575 177
Chronograph coupling lever A	计时码表连接杆A	0581 179
Chronograph coupling lever B	计时码表连接杆B	0581 180
Chronograph coupling lever holder	计时码表连接杆压片	0837 178
Chronograph coupling lever spring	计时码表连接杆簧片	0584 178
Wheel stop lever	停轮杆	0894 177
Hour chronograph coupling lever	时计码表连接杆	0743 179
Hammer operating lever A	三叉锤操作杆A	0587 181
Hammer operating lever B	三叉锤操作杆B	0587 179
Click spring	点击弹弓	0782 177
Hammer	三叉锤	0585 177
Intermediate date wheel and pinion	日送中间轮	0817 179
Date indicator driving wheel	日送轮	0802 178
Date jumper	日历定位弹弓	0810 177
Date corrector cam	日历修正操作凸轮	0732 177
Date corrector lever	日历修正操作杆	0595 177
Date indicator maintaining plate	日历定位片(日历盘压片)	0808 178
Hour wheel guard	时轮定位片	0376 178
Dial washer A	针座/金片A	0491 184
Dial washer B	针座/金片B	0491 181
Dial washer C	针座/金片C	0491 182
Dial washer D	针座/金片D	0491 183
Ratchet wheel screw	大钢轮螺丝	0012 919
Barrel and train wheel bridge screw	轮列夹板(大夹板)螺丝	0012 100
Balance bridge screw	油丝夹板螺丝	0012 100
Lower plate for barrel and train wheel bridge screw	发条鼓下夹板螺丝	0012 354
Center wheel bridge screw	中心轮夹板螺丝	0012 354
Pallet bridge screw	擒纵叉(马仔)夹板螺丝	0012 354
Automatic train bridge screw	自动锤夹板螺丝	0012 354
Unit intermediate spacer screw	模块垫片螺丝	0012 354
Yoke spring screw	横担压片螺丝	0012 168
Chronograph bridge screw	计时码表夹板螺丝	0012 092
Chronograph coupling lever spring screw	计时码表连接杆簧片螺丝	0012 092
Operating lever spring screw	操作杆弹弓螺丝	0012 092
Operating cam jumper screw	星柱轮压簧螺丝	0012 092
Main plate screw	地板螺丝	0012 092
Operating cam screw	星柱轮螺丝	0012 201
Date indicator maintaining plate screw	日历定位片螺丝	0016 709
Hour wheel guard screw	时轮定位片螺丝	0016 709
Winding Stem	巴芯	0351 200