

Movement Assembly Instructions


(including strike & chime setting)

Before assembling the movement to case, the movement must be pre-set to the time of 10:00 by following the steps below:

1. Install one "c" size battery in the battery compartment
2. While looking at the front of the movement, turn the hand set knob until a square shape appears in the window. See figure 1 below:



3. Continue to turn the hand set knob in either direction (figure 2 below) until the square shape is positioned in the middle of the window. While turning the hand set knob you may hear a small clicking sound, which is perfectly normal
4. Set the knob & Switches to the recommended positions below:

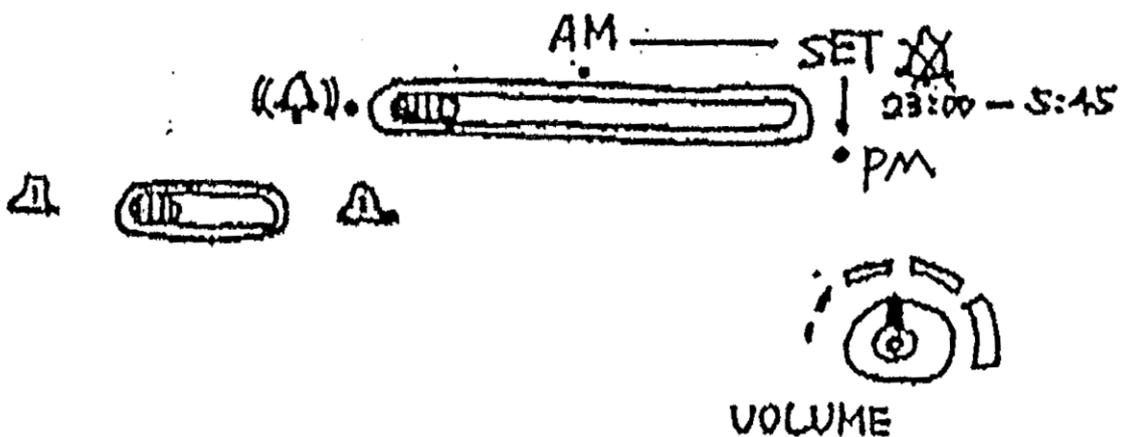

5. You are ready to mount the movement to the case