


SCHEMA DI MONTAGGIO VITE BLOCCAGGIO VETRO
 DIMA

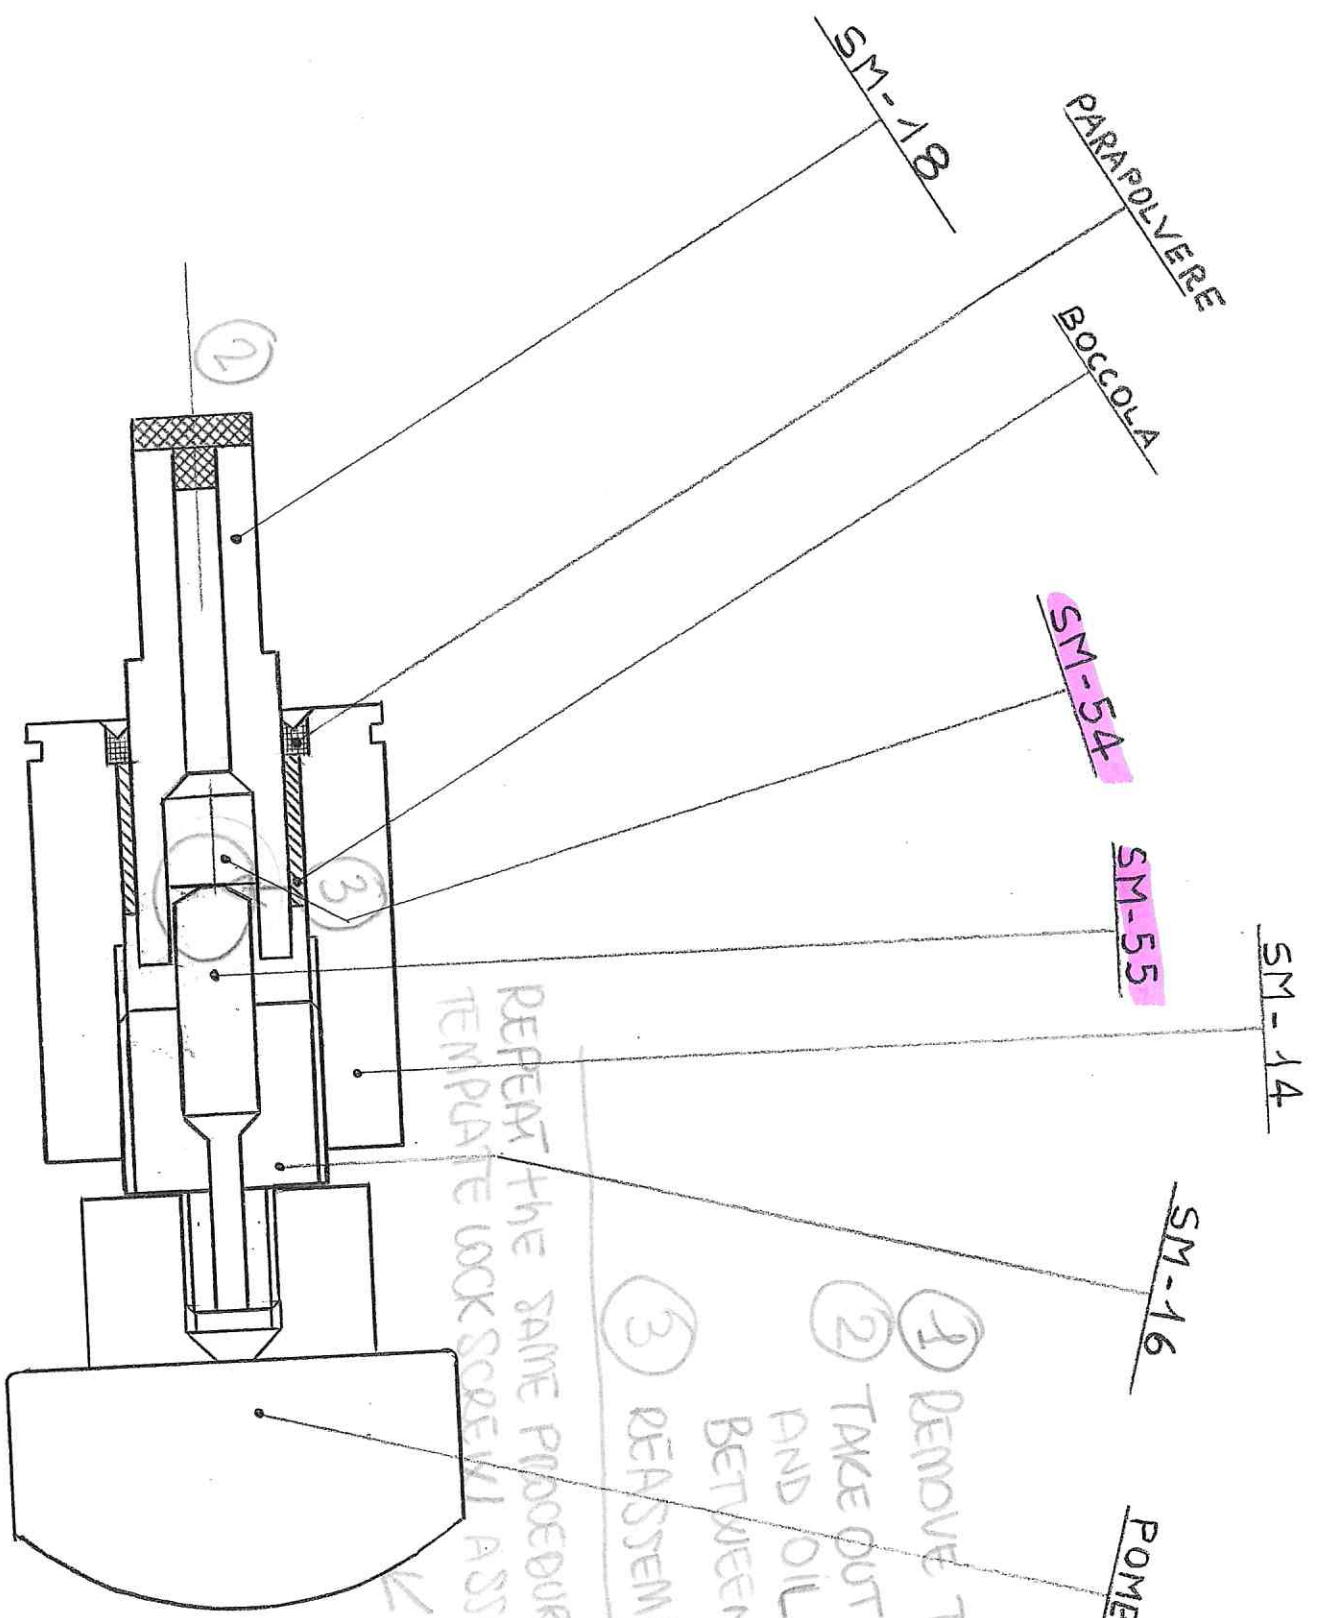

REPEAT THE SAME PROCEDURE WITH THE
 TEMPLATE LOCK SCREW ASSEMBLY.

- ① REMOVE THE KNOB
- ② TAKE OUT ASSEMBLY AND OIL WELL BETWEEN PARTS S4 e S5
- ③ REASSEMBLE THE KNOB

④