

02-1
(Catalog No.)02-2
(Catalog No.)02-3
(Catalog No.)02-4
(Catalog No.)

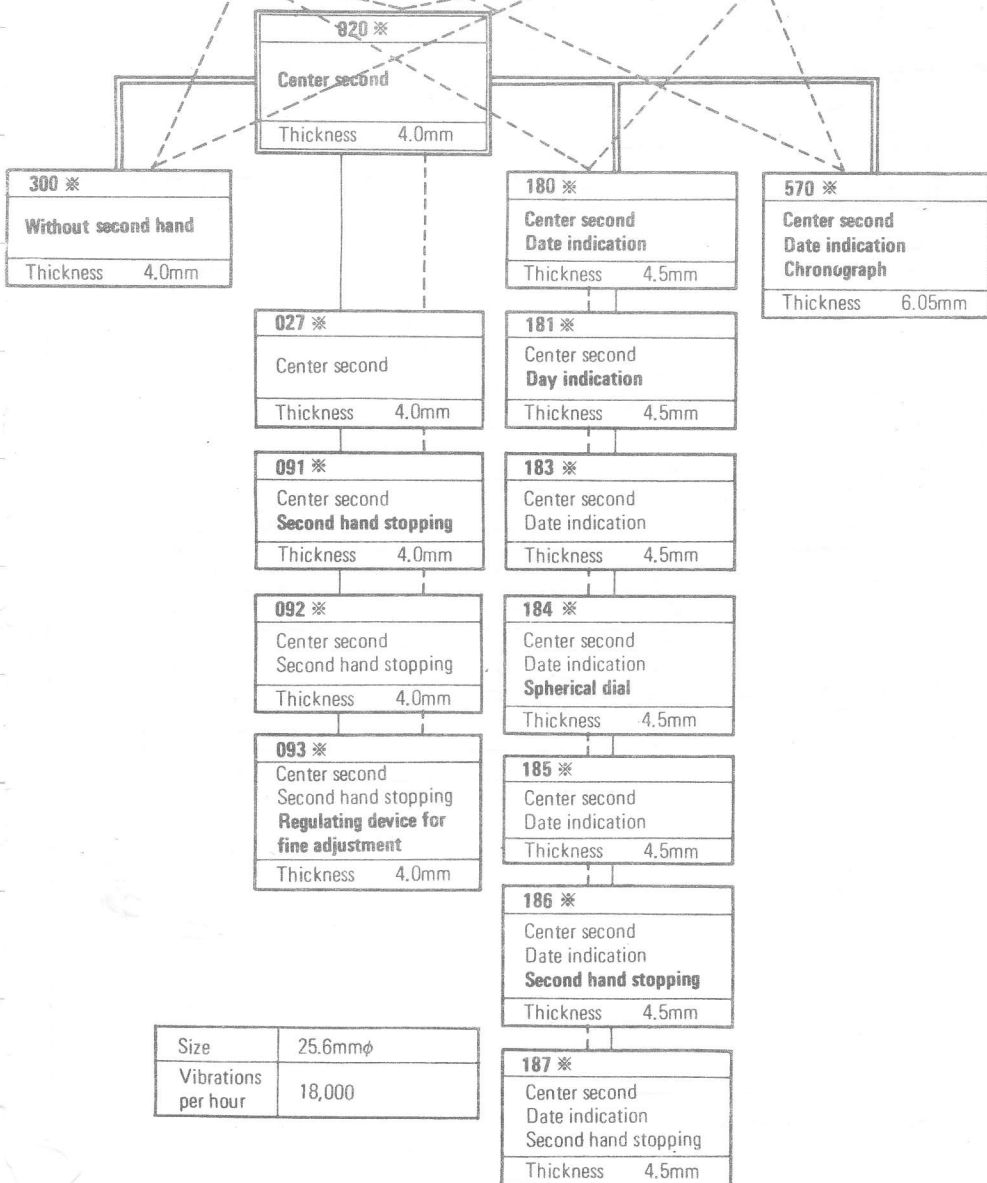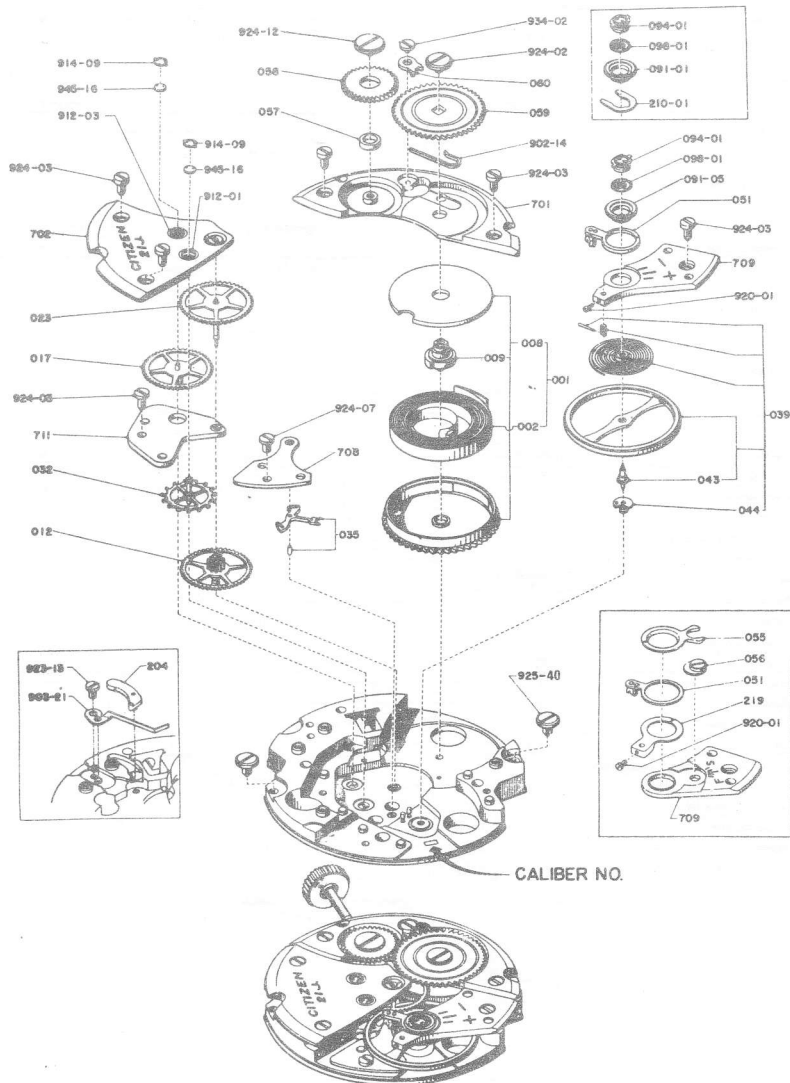

1. Even when the shape of a particular part in your movement differs from that of the part shown in the EXPLODED VIEW OF MOVEMENTS, the number will be the same, if the part is used for the same purpose.

Parts No.	Name of Parts	Caliber No. & Nos. of Jewels									
		0200-17	0200-19	0200-21	0201-17	0201-19	0201-21	0270-7	0271-7	0272-7	0270-17 0272-17
701	Barrel bridge	007	—	—	—	—	—	—	—	012	—
702	Train wheel bridge	010	011	012	010	011	012	015	—	030	013
708	Pallet cock	007	—	—	—	—	—	006	—	—	007
709	Balance cock	007	—	—	—	—	—	—	009	014	007 014
711	Center wheel cock	003	—	—	—	—	—	004	—	—	003
002	Mainspring	08	—	—	—	—	—	—	—	—	—
008	Barrel with arbor	06	—	—	—	—	—	—	—	—	—
009	Barrel arbor	06	—	—	—	—	—	—	—	—	—
012	Center wheel and pinion with cannon pinion	13	—	—	—	—	—	—	—	—	—
017	Third wheel and pinion	09	—	12	09	—	12	09	—	—	—
023	Sweep second wheel and pinion	08	—	—	—	—	—	—	—	—	—
032	Escape wheel and pinion	44	13	—	44	13	—	44	—	—	—
035	Jeweled pallet fork and staff	29	—	—	—	—	—	—	—	—	—
039	Balance with hairspring, regulated	11	—	—	—	—	—	—	—	—	—
043	Balance staff	07	—	—	—	—	—	—	—	—	—
044	Roller, with jewel	04	—	—	—	—	—	—	—	—	—
051	Regulator	05	—	—	—	—	—	—	—	—	—
057	Crown wheel ring	07	—	—	—	—	—	—	—	—	—
058	Crown wheel	06	—	—	—	—	—	—	—	—	—
059	Ratchet wheel	07	—	—	—	—	—	—	—	—	—
060	Click	05	—	—	—	—	—	—	—	—	—
	Click spring	902-14	—	—	—	—	—	—	—	—	—
	Barrel bridge screw	924-03	—	—	—	—	—	—	—	—	—
	Screw for train wheel bridge	—	—	—	—	—	—	—	—	—	—
	Balance cock screw	—	—	—	—	—	—	—	—	—	—
	Screw for center wheel cock	—	—	—	—	—	—	—	—	—	—
	Pallet cock screw	924-07	—	—	—	—	—	—	—	—	—
	Crown wheel screw	924-30 (924-12)	—	—	—	—	—	—	—	—	—
	Ratchet wheel screw	924-20 (924-02)	—	—	—	—	—	—	—	—	—
	Click screw	934-02	—	—	—	—	—	—	—	—	—
	Hairspring stud screw	920-01	—	—	—	—	—	—	—	—	—
	Case screw	925-40	—	—	—	—	—	—	—	—	—
	(PS) Upper cap jewel, mounted	094-01	—	—	—	—	—	—	—	—	—
	(PS) Spiral spring with jewel	098-01	—	—	—	—	—	—	—	—	—
	(PS) Upper end-piece	091-01	—	—	091-05	—	—	091-01	091-05	—	091-01 091-05
	(PS) Spring clip	210-01	—	—	—	—	—	210-01	—	—	210-01
	(PF) Upper cap jewel spring for third wheel			914-09			914-09				
	(PF) Upper cap jewel for third wheel			945-16			945-16				
	(PF) Upper end-piece for third wheel			912-03			912-03				
	(PF) Upper cap jewel spring for escape wheel		914-09	—		914-09	—				
	(PF) Upper cap jewel for escape wheel		945-16	—		945-16	—				
	(PF) Upper end-piece for escape wheel		912-01	—		912-01	—				

Note: (PS) Parashock (PF) Prefix