


Technical note 115: Check elbow fitting of test line  
of the **MIG-O-MAT** microflame series



As part of the annual maintenance or in the event of a malfunction in the pressure control, the elbow fitting (connection of the test line to the reactor) should be checked for possible blockages. To do this, remove the hose from the elbow (e.g. strip it off with flat-nose pliers) and then unscrew the elbow with a 19mm open-end wrench. Check hose nozzle for blockages and clean if necessary (e.g. with a small file or drill) or replace it (order number: 50.2501143)

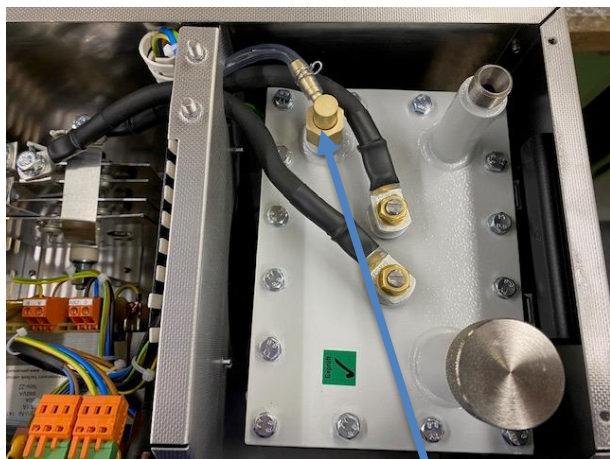

View of the interior of the device with elbow fitting



Remove any existing hose clamp



Strip off the hose using flat-nosed pliers

Technical note 115: Check elbow fitting of test line  
of the **MIG-O-MAT** microflame series

**MIG·O·MAT**®



Unscrew the elbow connection with a 19mm wrench.  
To loosen, tap lightly against the elbow fitting.



Check elbow fitting for blockage (here: blockage with  
blue deposit)



Clean the elbow fitting, e.g. with a drill  
or a small round file.

Then reassemble the elbow and hose.